

Class 37

Function List

D&H Decoder

F Key	Setting	Function/Sound	Volume Setting CV	Default
0	latch	Lights	-	-
1	latch	Engine on/off	331	150
2	optional	Brake Key	340 1 st Valve 334 Squeal	90 90
3	momentary	Horn Lo	336	167
4	momentary	Horn Hi	335	170
5	latch	Light Engine	-	-
6	latch	Engine Idle	-	-
7	momentary	Lo Hi Horn	338	167
8	latch	Aux 1	-	-
9	optional	Flange Squeal	346	110
10	momentary	Brake Release	339	90
11	momentary	Hi Lo Horn	337	170
12	latch	Door open then close	345	170
13	optional	Buffer Clashing and Clacking	347	150
14	optional	Primer	341	125
15	latch	Fan	342	80
16	latch	Buffer up and Couple up	343	110
17	momentary	Platform whistle	344	175
18	latch	Spirax	332 Eng. off 348 Eng. on	50 75
19	latch	Fade all Sounds	349	0 (Minimum)
20	latch	Momentum off	-	-
21	-	Reserved	-	-
22	-	Reserved	-	-
23	-	Reserved	-	-

24	-	Reserved	-	-
25	-	Reserved	-	-
26	-	Reserved	-	-
27	momentary	Volume down	330	160 StartVol
28	momentary	Volume up	330	160 StartVol