

## Southern 0-6-0 Generic / Q Class

Function List

Locoman Sounds Mapping Scheme

D&H Decoder

F Key	Setting	Function/Sound	Volume Setting CV	Default
0	latch	Lights	-	-
1	latch	Chuff Sound on/off	331	140
2	momentary	Whistle (variable length)	335	160
3	momentary	Toot Toot	336	170
4	optional	Brake Key	334 Squeal	105
5	latch	Draincocks (variable length, min. 5 sec)	337	170
6	latch	On: Buffer up / Off: Couple up	346	210
7	optional	Flange Squeal (variable length)	340	170
8	momentary	Fancy Whistle	342	190
9	latch	Coasting Mode	-	-
10	latch	Coal Shovelling & Aux1 (also as a random sound)	338	100
11	latch	Blower	341	35
12	optional	Coach Doors close (variable length)	344	80
13	latch	Injector (also as a random sound)	339	90
14	momentary	Guards Whistle (variable length)	345	165
15	latch	Safety Valve	343	200
16	latch	Water Fill (variable length)	348	120
17	latch	Shunting Mode	-	-
18	latch	no Brake Squeal	334	105
19	latch	Momentum off	-	-
20	momentary	Volume Control (loop, 16 steps)	330	120 StartVol
21	latch	Fade all Sounds	349	0 (Minimum)
22-28	-	Reserved	-	-